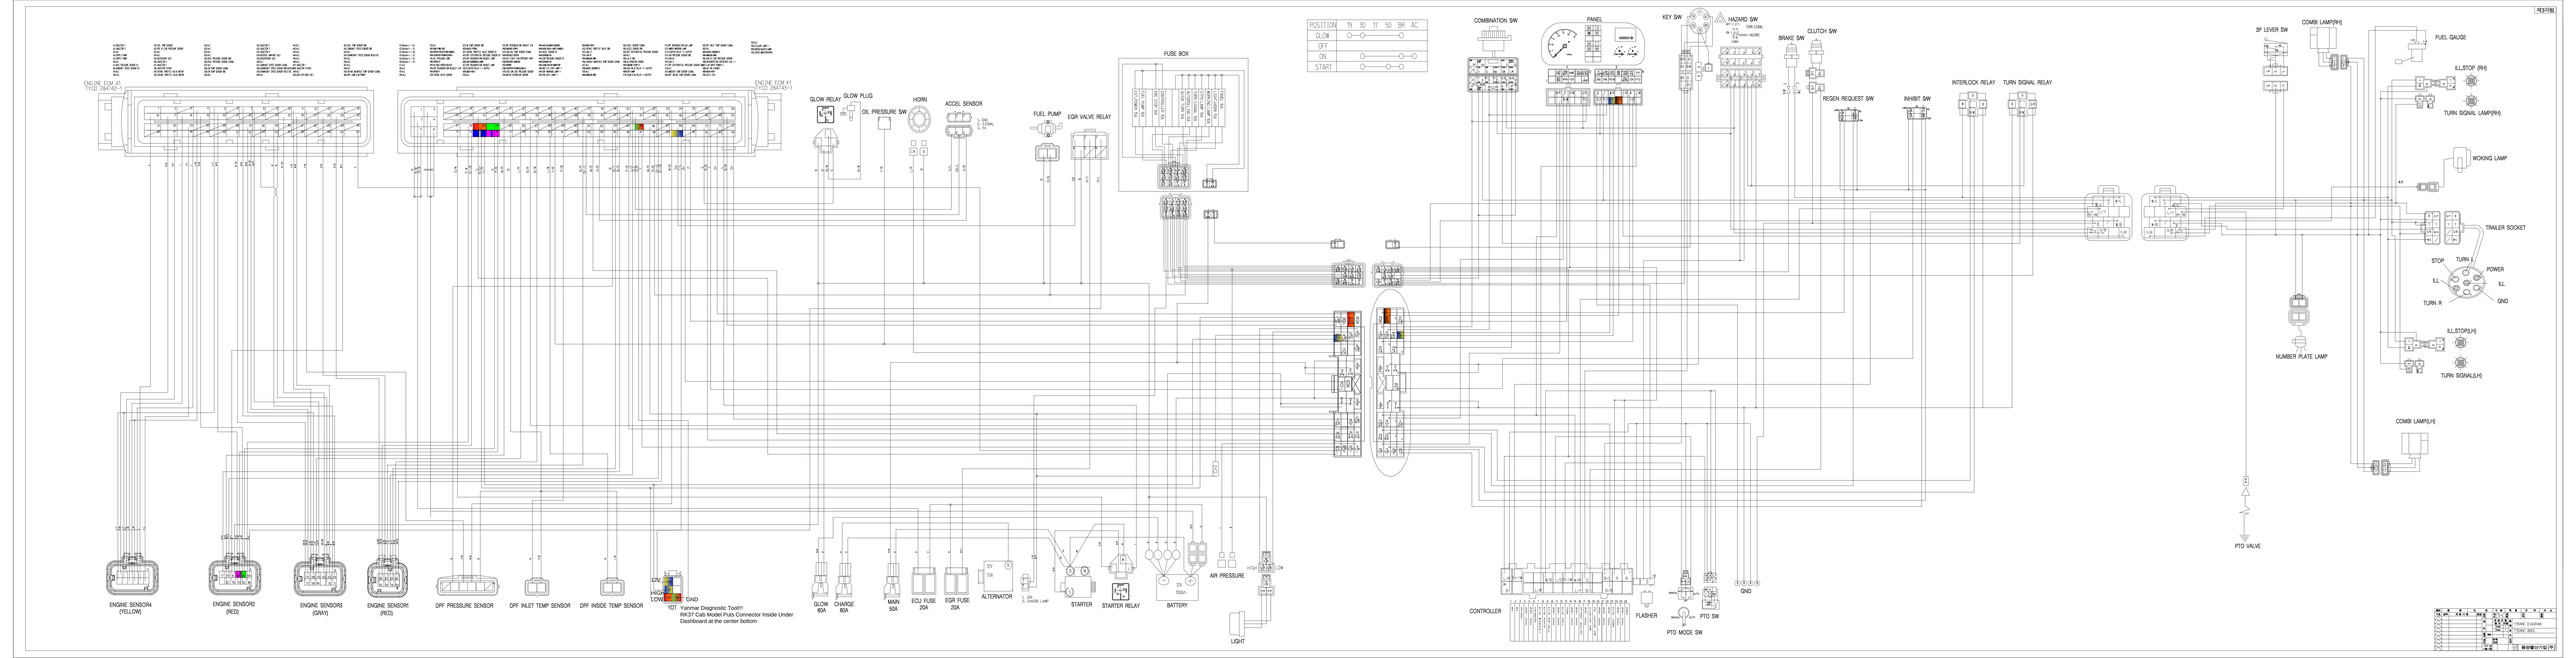
ENGINE ECM A1
TYCO 284742-1
ENGINE ECM X1
TYCO 284743-1
GLOW RELAY
GLOW PLUG
OIL PRESSURE SW
HORN
ACCEL SENSOR
FUEL PUMP
EGR VALVE RELAY
FUSE BOX
COMBINATION SW
PANEL
KEY SW
HAZARD SW
BRAKE SW
CLUTCH SW
REGEN REQUEST SW
INHIBIT SW
INTERLOCK RELAY
TURN SIGNAL RELAY
3P LEVER SW
COMBI LAMP(R/H)
FUEL GAUGE
ILLSTOP (R/H)
TURN SIGNAL LAMP(R/H)
WOKING LAMP
TRAILER SOCKET
STOP
TURN L
POWER
ILL
ILL
TURN R
GND
ILLSTOP(L/H)
TURN SIGNAL(L/H)
COMBI LAMP(L/H)
NUMBER PLATE LAMP
PTO VALVE
ENGINE SENSOR4 (YELLOW)
ENGINE SENSOR2 (RED)
ENGINE SENSOR3 (GRAY)
ENGINE SENSOR1 (RED)
DPF PRESSURE SENSOR
DPF INLET TEMP SENSOR
DPF INSIDE TEMP SENSOR
HIGH
LOW
GND
YDT
Yanmar Diagnostic Tool!!!
P/K37 Cab Model Puts Connector Inside Under Dashboard at the center bottom
GLOW 60A
CHARGE 60A
MAIN 50A
ECU FUSE 20A
EGR FUSE 20A
ALTERNATOR
STARTER
STARTER RELAY
BATTERY
AIR PRESSURE
LIGHT
CONTROLLER
FLASHER
PTO SW
PTO MODE SW
GND
POSITION
19 30 17 50 BR AC
GLOW
OFF
ON
START